

WRF04 (x) RS485 BACnet MS/TP

Room Temperature Sensor Wall Mounted

thermokon®
HOME OF SENSOR TECHNOLOGY

Datasheet

Subject to technical alternation
Issue date: 08.05.2026 · A140




» APPLICATION

The room operating panel is designed for temperature detection and integrated manual control of HVAC applications (change set point, change occupancy, change fan speed).

» TYPES AVAILABLE

- WRF04 BACnet AO2V
- WRF04 **P** BACnet AO2V
- WRF04 **PTD** BACnet AO2V
- WRF04 **PST** BACnet AO2V
- WRF04 **PSTD** BACnet AO2V

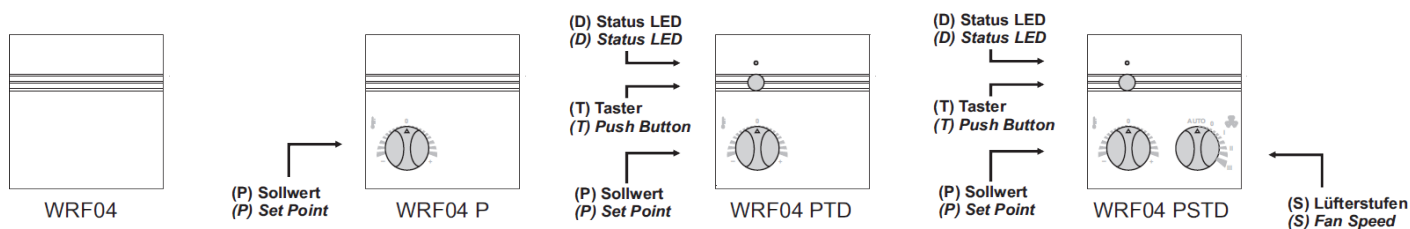

*Type AO2V

2 digital inputs: floating, parallel to basic device

2 analogue outputs: 0..10 V / 20 mA for valve control cooling/heating

set point potentiometer (P), rotary switch (S), presence button (T) and status-LED (D)

» SECURITY ADVICE – CAUTION



The installation and assembly of electrical equipment should only be performed by authorized personnel.

The product should only be used for the intended application. Unauthorised modifications are prohibited! The product must not be used in relation with any equipment that in case of a failure may threaten, directly or indirectly, human health or life or result in danger to human beings, animals or assets. Ensure all power is disconnected before installing. Do not connect to live/operating equipment.

Please comply with

- Local laws, health & safety regulations, technical standards and regulations
- Condition of the device at the time of installation, to ensure safe installation
- This data sheet and installation manual

» NOTES ON DISPOSAL



The crossed-out wheeled bin symbol indicates that the product or removable batteries must not be disposed of with household or commercial waste. Within the EU, you are legally obliged to dispose of the product separately and appropriately in accordance with the national laws of your country. Alternatively, please contact your supplier or Thermokon Sensortechnik GmbH. Further information can be found at: www.thermokon.com

» REMARKS TO ROOM SENSORS

Location and Accuracy of Room Sensors

The room sensor should be mounted in a suitable location for measuring accurate room temperature. The accuracy of the temperature measurement also depends directly on the temperature dynamics of the wall. It is important, that the back plate is completely flush to the wall so that there is sufficient circulation of air through the vents in the cover, otherwise, deviations in temperature measurement will occur due to uncontrolled air circulation. The temperature sensor should not be covered by furniture or other objects. Mounting next to doors (due to draught) or windows (due to colder outside wall) should be avoided.

Surface and Flush Mounting

The measuring result is influenced by the thermal characteristics of the wall. A solid concrete wall responds to thermal fluctuations within a room in a much slower than a light-weight structure wall. Room temperature sensors installed in flush-mounted boxes have a longer response time to thermal variations. In extreme cases they detect the radiant heat of the wall even if the air temperature in the room is lower for example. The quicker the dynamics of the wall (temperature acceptance of the wall) or the longer the selected inquiry interval of the temperature sensor is the smaller the deviations limited in time are.

» BUILD-UP OF SELF-HEATING BY ELECTRICAL DISSIPATIVE POWER

Temperature sensors with electronic components always have a dissipative power, which affects the temperature measurement of the ambient air. The dissipation in active temperature sensors shows a linear increase with rising operating voltage. This dissipative power has to be considered when measuring temperature. In case of a fixed operating voltage ($\pm 0,2$ V) this is normally done by adding or reducing a constant offset value. As Thermokon transducers work with a variable operating voltage, only one operating voltage can be taken into consideration, for reasons of production engineering. Transducers 0..10 V / 4..20 mA have a standard setting at an operating voltage of 24 V =. That means, that at this voltage, the expected measuring error of the output signal will be the least. For other operating voltages, the offset error will be increased by a changing power loss of the sensor electronics. If a re-calibration should become necessary later directly on the sensor, this can be done by means of a trimming potentiometer on the sensor board.

Remark: Occurring draft leads to a better carrying-off of dissipative power at the sensor. Thus temporally limited fluctuations might occur upon temperature measurement.

» PRODUCT TESTING AND CERTIFICATION




Declaration of conformity

The declaration of conformity of the products can be found on our website <https://www.thermokon.de/>.

» **TECHNICAL DATA**

Measuring range	Temperature	
Output voltage	2x 0..10 V / max. 20 mA	
Network technology	BACnet MS/TP, baud rate 9.600, 19.200, 38.400, 57.600 or 76800	
Power supply	15..24 V = ($\pm 10\%$) or 24 V~ ($\pm 10\%$)	
Power consumption	typ. 0,4 W (24 V =) 0,6 VA (24 V ~)	
Measuring range temp	0..+50 °C	
Accuracy temperature	$\pm 0,5$ K of Measuring range (typ. at 21 °C)	
Inputs	2 inputs for floating contacts	
Set point (P) (optional)	set point adjustment	
Rotary switch (S) (optional)	fancoil (max. 5 stages), 2-stages (0,I), 3-stages (0,I,II), 4-stages (0,I,II,III) or 5-stages (Auto,0, I, II, III)	
Button (T) (optional)	presence detection	
LED (D) (optional)	status feedback, more LEDs available, colour green, red or yellow	
Labelling	rotary switch 0,I or 0,I,II or 0,I,II,III or Auto,0,I,II,III	Set point -,0,+
Enclosure	PC, pure white	
Protection	IP30 according to EN 60529	
Cable entry	breaking points top/bottom, rear entry	
Connection electrical	terminal block max. 1,5 mm ²	
Ambient condition	-35..+70 °C, max. 85% rH non-condensing	
Weight	ca. 95 g	
Mounting	flush mounted with standard EU box ($\varnothing=60$ mm), to be mounted flat onto the surface using adhesive foil or screws	
Notes	custom colours, labelling and operating elements on request, other sensors on request	

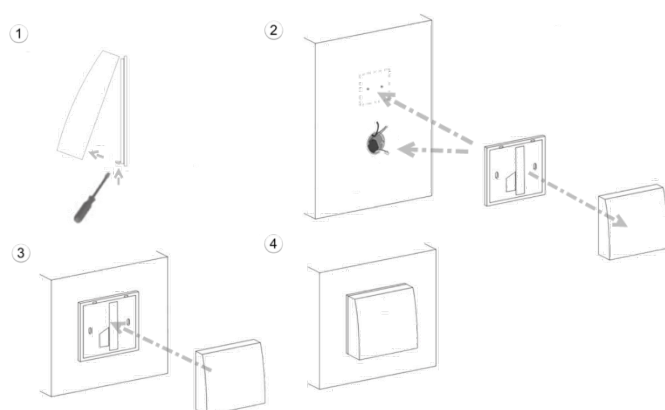
» **MOUNTING ADVICES**

The device may be installed in a voltage free condition only.


The device can be installed on a flush-mounted box or directly onto the wall.

If installed on a flush-mounted box, seal the pipe to eliminate drafts.


» CONNECTION PLAN

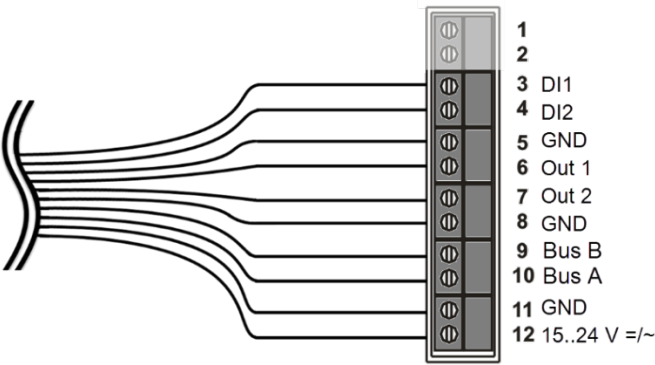

» CONFIGURATION

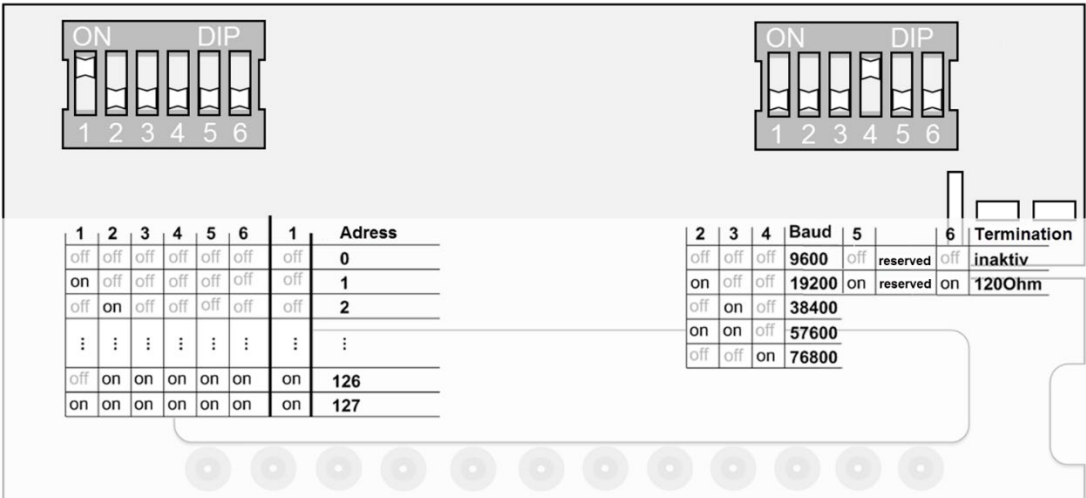

» DIMENSIONS (MM)

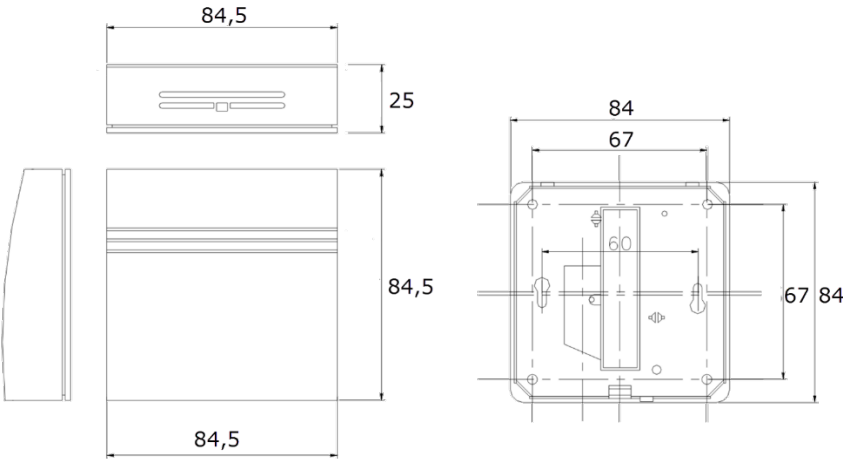

» ACCESSORIES

Rawl plugs and screws (2 pcs. each)	Item No. 660945
Frame for surface mounting WRF04	Item No. 111584
Balls stroke protection BS100 (only for WRF04)	Item No. 103312